



Illustration : model 5000

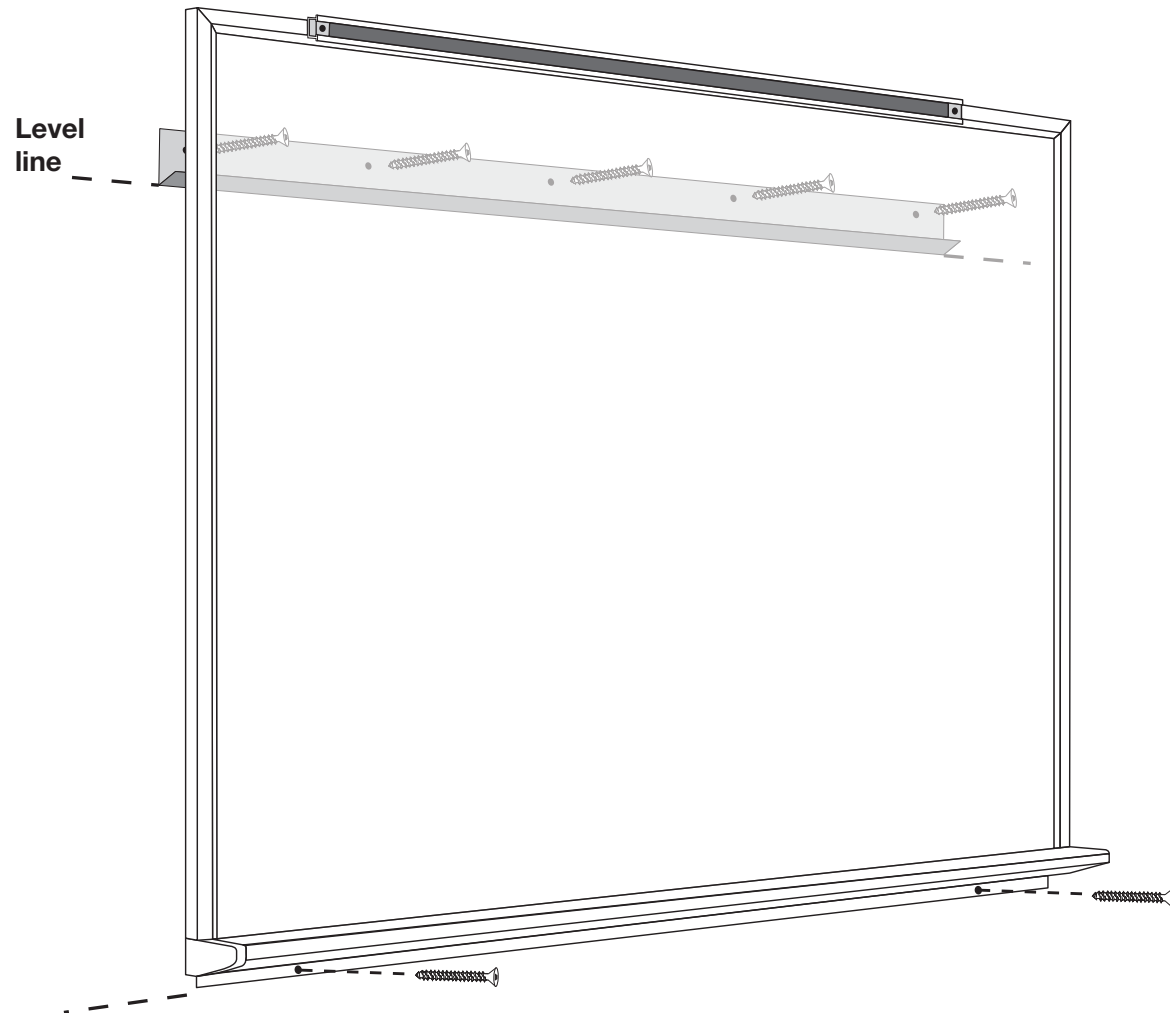

SIDE FACE

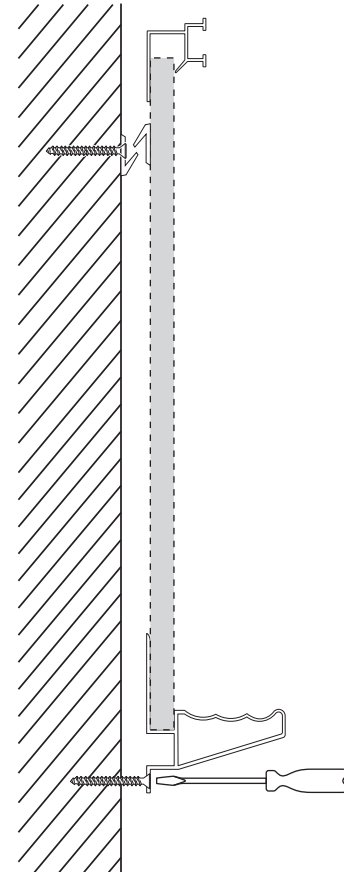

SERIES

**3000 and 5000**

**IN ORDER TO HIDE THE ANCHORAGE  
ON THE BACK OF THE BOARD,**

You need to determine the height you want.  
Install the "V" moulding to the wall then hang the  
board on that moulding and settle the bottom of the  
board with the small screws.

**FOR ANY QUESTIONS REGARDING THE  
INSTALLATION, PLEASE DO NOT HESITATE  
TO CONTACT US AT 450-632-1660**