



Illustration : model 640

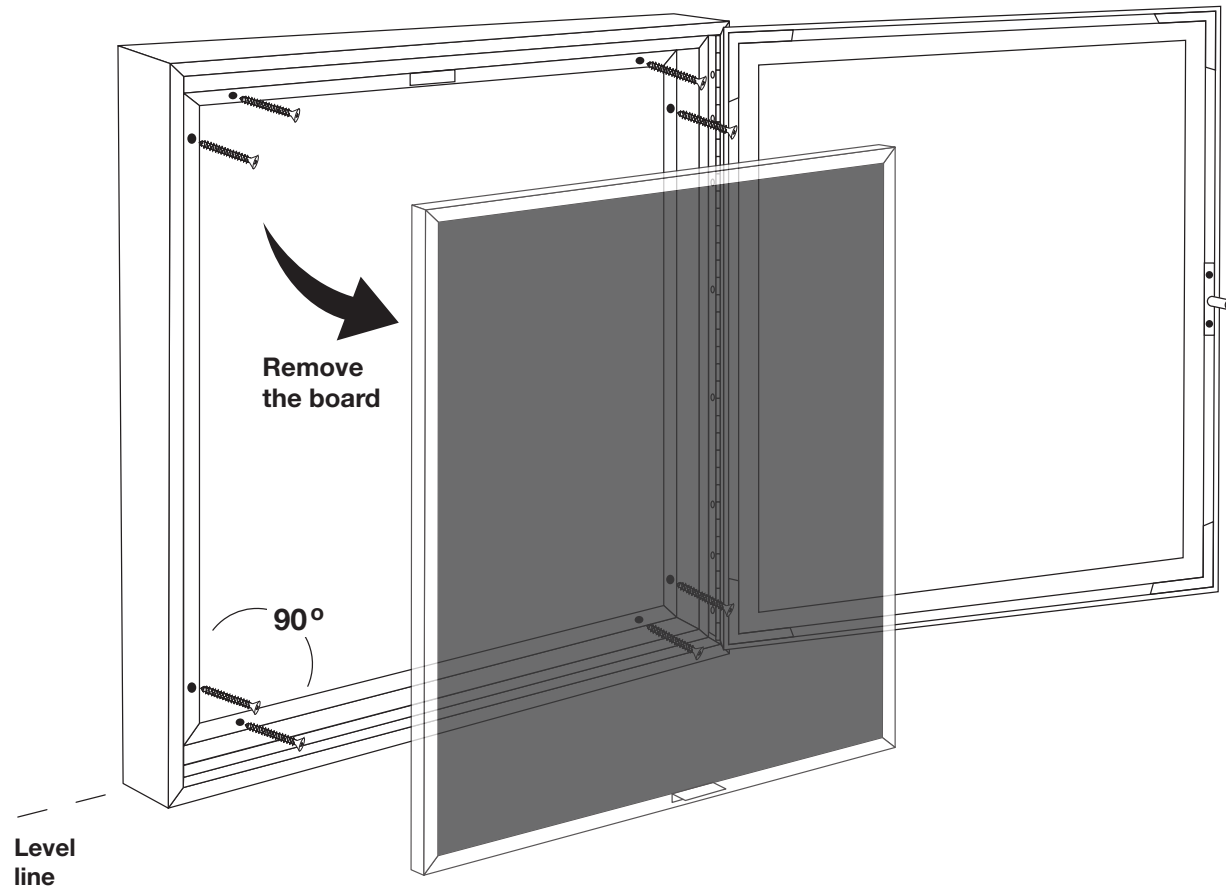

**SIDE FACE**

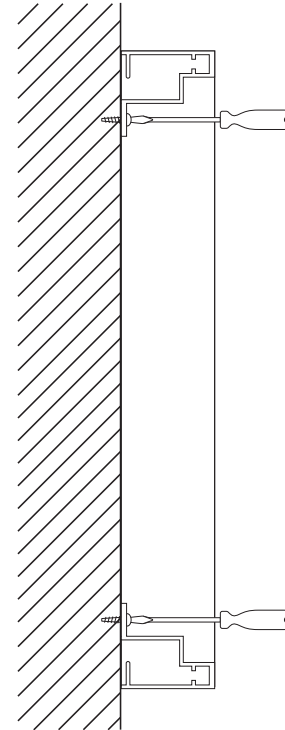

**SERIES**

**640, 650 and 660**

**IN ORDER TO HIDE THE ANCHORAGE  
ON THE BACK OF THE BOARD,**

You need to lift and take off the back panel, then screw the cabinet on the hinge side, do this with a spirit level and verify that the door closes correctly. Mark the locations of the holes for the other side, screw them and re-install the back panel inside the cabinet.

**FOR ANY QUESTIONS REGARDING THE  
INSTALLATION, PLEASE DO NOT HESITATE  
TO CONTACT US AT 450-632-1660**