




CANADIAN BLACKBOARD
COMPANY LTD

30, Montée des Bouleaux
St-Constant (Québec) J5A 1B6
Phone: (450) 632-1660
Fax: (450) 632-5449


www.cctn.com

INSTALLATION

Illustration : model 714

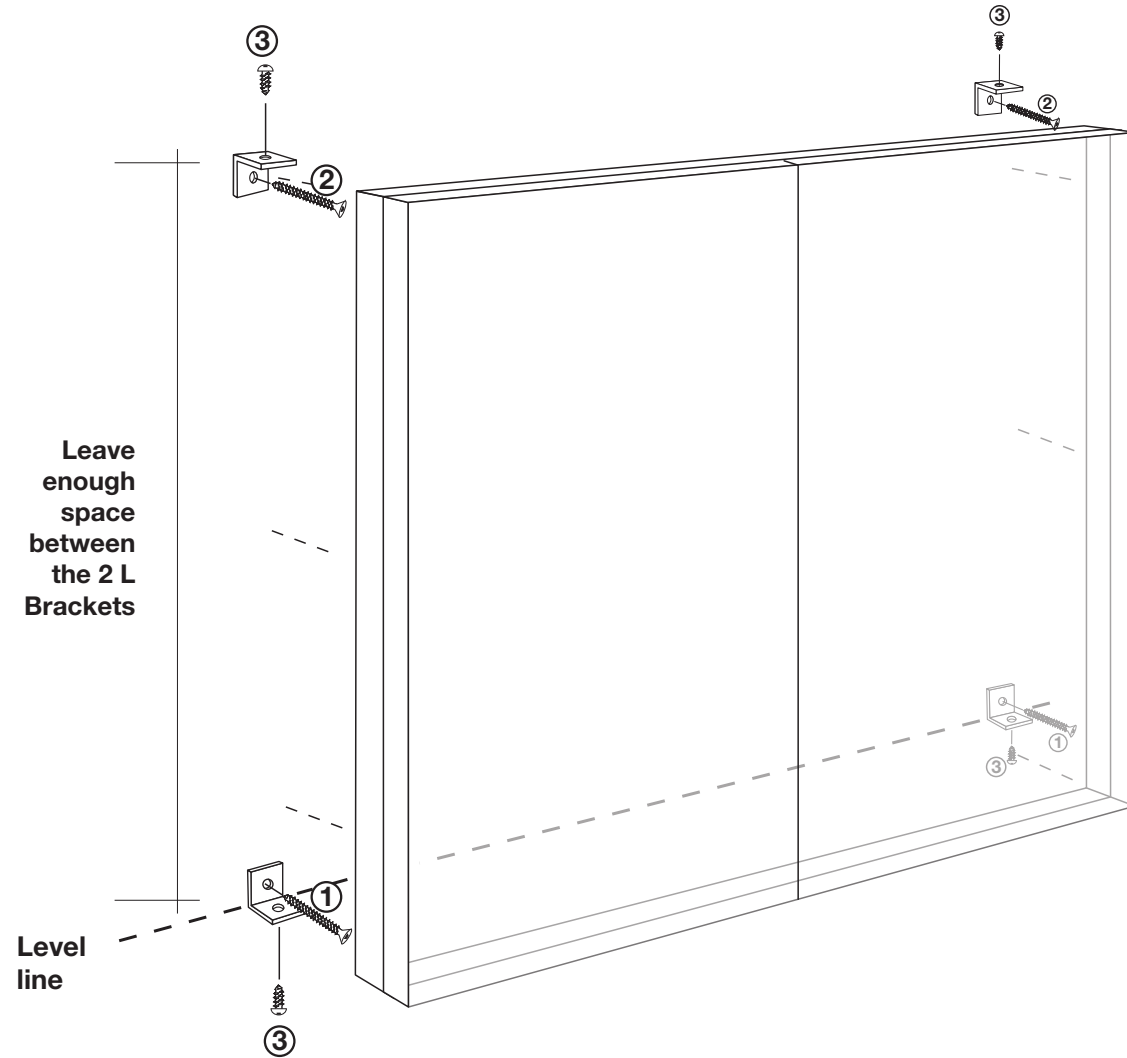

SIDE FACE

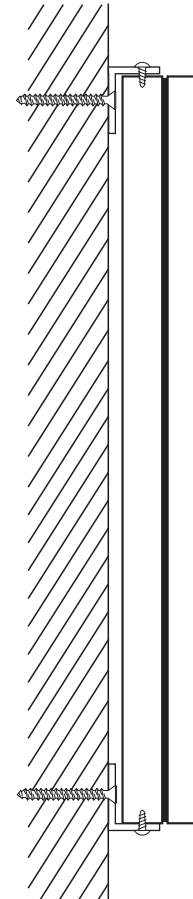

SERIES

**714 and 715
with L Brackets**

**IN ORDER TO HIDE THE ANCHORAGE
ON THE BACK OF THE BOARD,**

You need to install the L bracket on the bottom of the wall (1). Use a spirit level to dispose them, this procedure will determine the location of the bottom wall. Repeat the same procedure for the top but leave enough space between the 2 L Brackets so that the board leans correctly on the wall.

Finally install the screws in the moulding of the board.

**FOR ANY QUESTIONS REGARDING THE
INSTALLATION, PLEASE DO NOT HESITATE
TO CONTACT US AT 450-632-1660**