



Illustration : model 2000 - Display

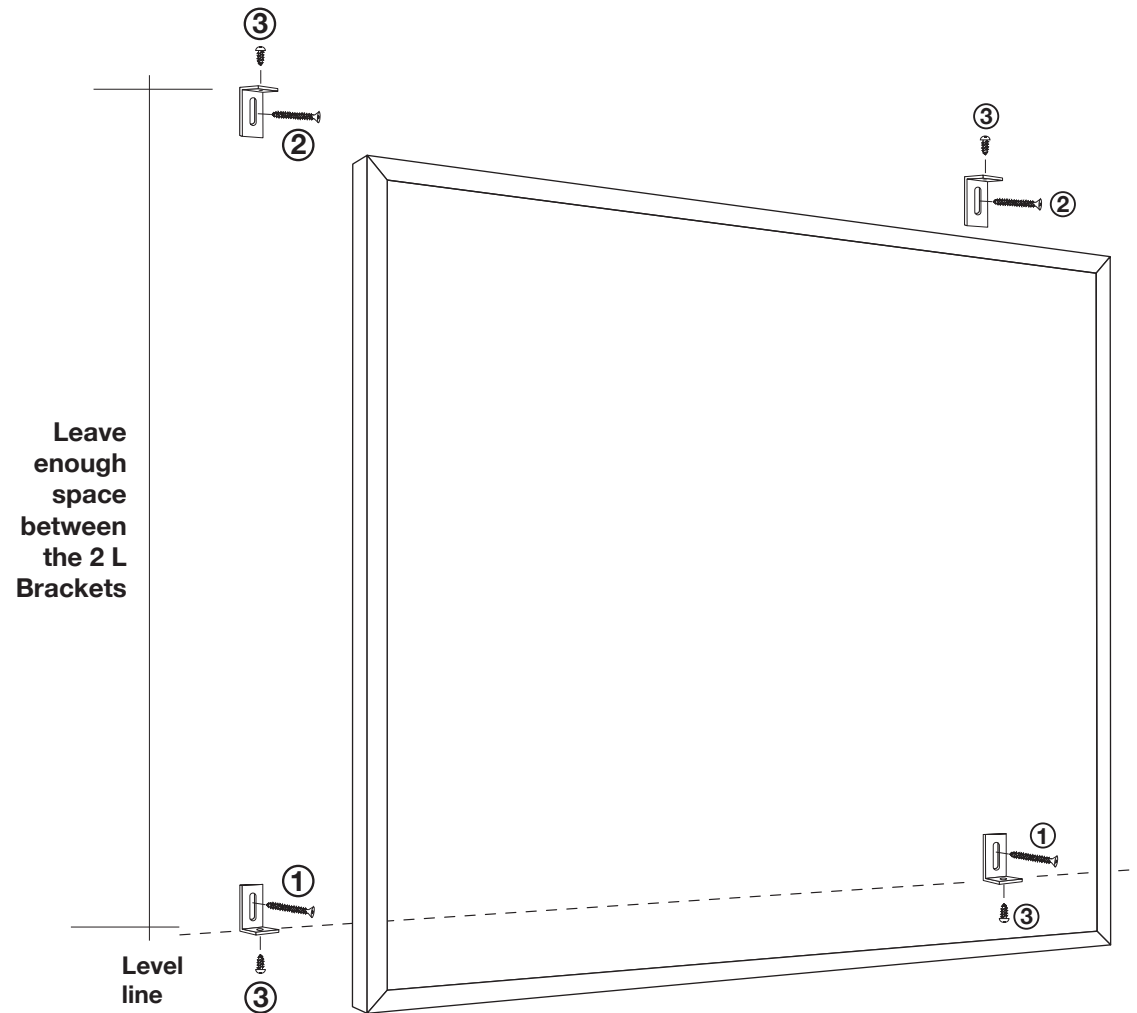

SIDE FACE

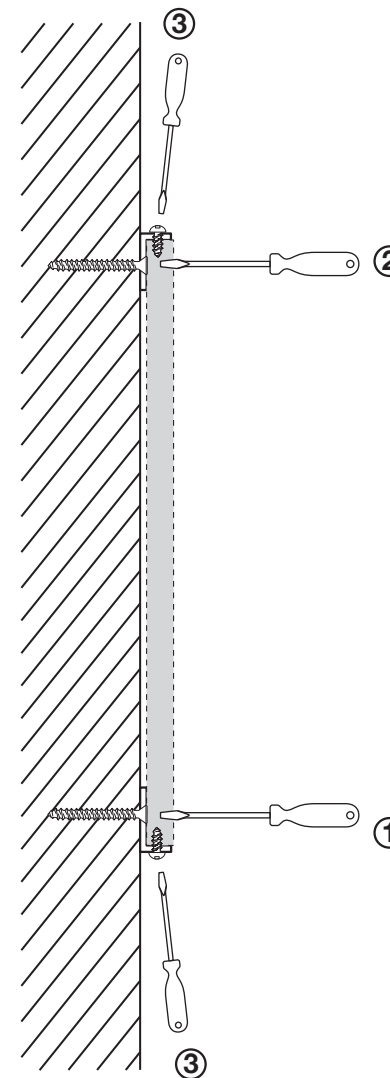

SERIES

series 80, 85 and 2000 display boards

IN ORDER TO HIDE THE ANCHORAGE ON THE BACK OF THE BOARD,

You need to install the L bracket on the bottom of the wall (1). Use a spirit level to dispose them, this procedure will determine the location of the bottom wall. Repeat the same procedure for the top but leave enough space between the 2 L Brackets so that the board leans correctly on the wall.

Finally install the screws in the moulding of the board.

Important note for Forbo-colored cork panels:
For Forbo-colored cork panels, it is recommended to add glue spots to ensure better adhesion. This will prevent the panel from warping or leaving empty spaces, which could compromise its stability and aesthetic appearance

FOR ANY QUESTIONS REGARDING THE INSTALLATION, PLEASE DO NOT HESITATE TO CONTACT US AT 450-632-1660