



Illustration : model 8000

Remove
all plastic
moldings

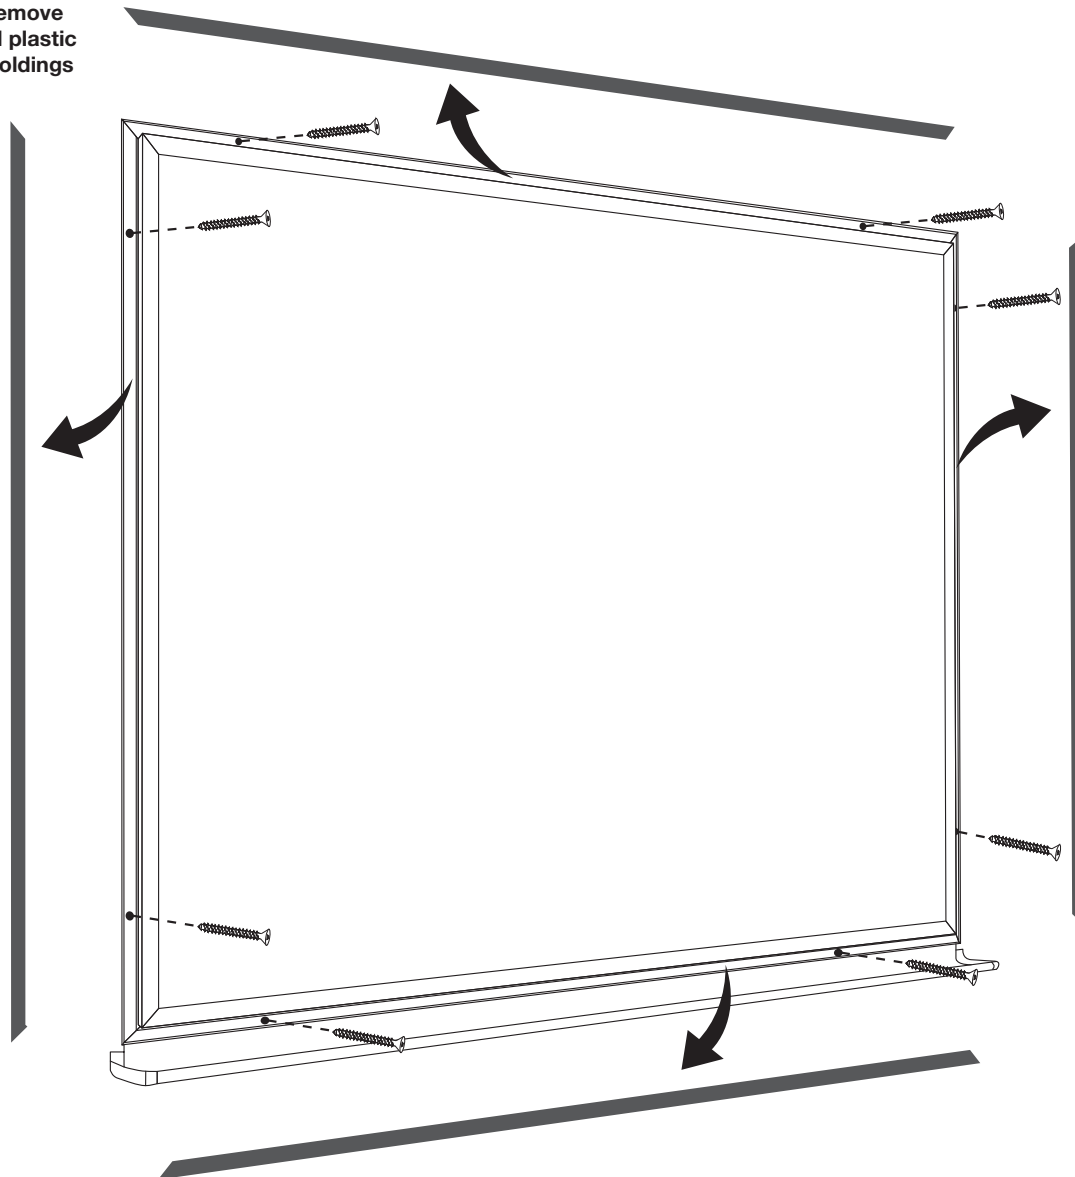

SIDE FACE

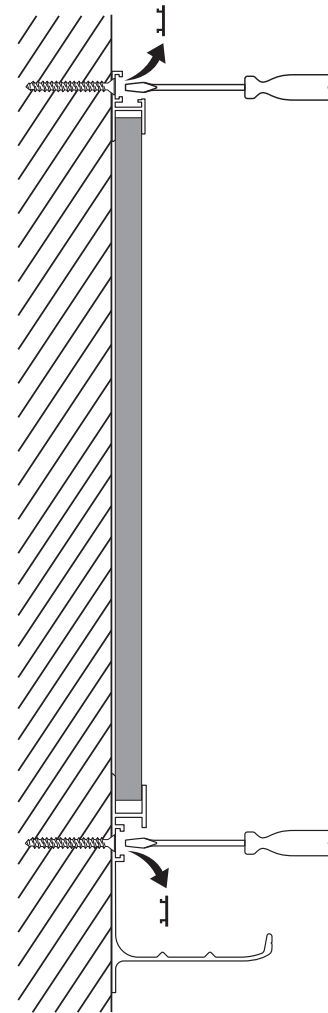

SERIES

8000

**IN ORDER TO HIDE THE ANCHORAGE
ON THE BACK OF THE BOARD,**

You need to determine the height you want.
Take off the black plastic moldings
Screw the board to the wall where holes have
already been drilled. Replace the plastic moldings.

**FOR ANY QUESTIONS REGARDING THE
INSTALLATION, PLEASE DO NOT HESITATE
TO CONTACT US AT 450-632-1660**